

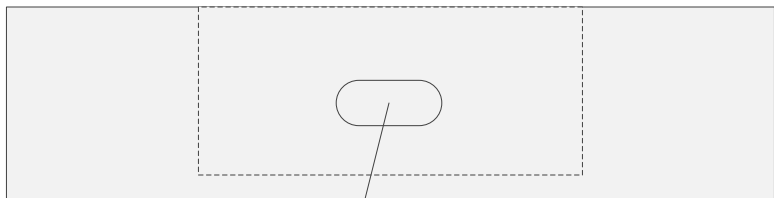


Wall must be 2.5mm to 4mm thick  
Use 0.125" (3.17mm)

Cut 1/4" x 1" slot

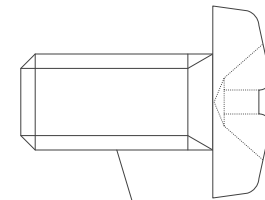

Security lock slot  
3mm x 7mm +0.26/-0.00  
0.118"x 0.275" (use 0.125" tool)

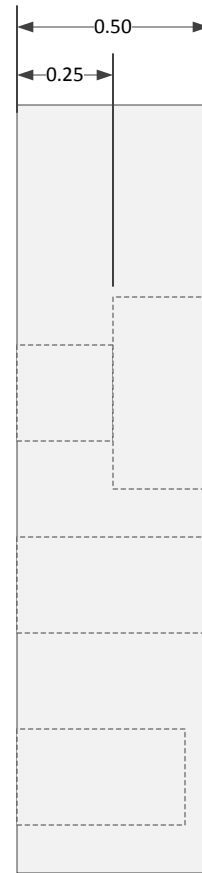

1/4-20 x 1/2" Tamper Proof  
Screw

# CamLockBlock

A DSLR Camera Security Block

Andrew Cooper

30 Nov 2015

Page 1